

Spare parts for dial test indicator 2381-08



Part NO.	Code	Description
1	SP-DIAL-BEZEL-2381-08	Bezel
2	SP-DIAL-GLASS-2381-08	Glass
3	SP-DIAL-POINTER-2381W	Pointer
4	SP-BP-2381-08	Dial
5	SP-SPIRAL SPRING-2380-08	Balance spring
6	6298-2	Holding stem (8mm)
7	6298-1	Holding stem (4mm)
8	SP-LINK-GEAR-2380-08	Link gear
9	SP-DIAL ASSY-2380-08	Assy for 2381-08
10	SP-BEARING ASSY-2380	Bearing assy
11	SP-DIAL-WRENCH-WL	Wrench
12	6284-3	Contact point