

Spare parts for centering indicator 2385 series



Part NO.	Code	Description
1	SP-RESTRAINING ARM	Restraining arm
2	SP-SPANNER-2385	Spanner
3	SP-DIAL INDICATOR-2385-3	Dial indicator for 2385-3
4	SP-DIAL SCREW-2385	Fixed screw for dial indicator
5	SP-LOCK SCREW-2385	Lock screw
6	SP-EXTERNAL-2385-40	40mm external feeler
	SP-EXTERNAL-2385-90	90mm external feeler
	SP-EXTERNAL-2385-140	140mm external feeler
7	SP-INTERNAL-2385-40	40mm internal feeler
	SP-INTERNAL-2385-90	90mm internal feeler
	SP-INTERNAL-2385-140	140mm internal feeler
8	SP-SPRING FEELER	Spring loaded feeler
9	SP-BLACK SUPPORT-2385	Black support for 2385
10	SP-DIAL-GLASS-2385	Glass
11	BPN-2385-3	Inside dial for 2385-3
12	BPW-2385-3	Outside dial for 2385-3