




DATA
OUTPUT

UNIVERSAL CALIPERS



1125-600

- Non waterproof
- Buttons: on/off, set, mm/inch, ABS, preset (+, -)
- Automatic power off, move the digital unit to turn on power
- Battery CR2032
- Made of stainless steel



With data interface (optional wireless transmitter code 7315-22, receiver is needed)

Code	Range *	Resolution	Accuracy	L
1125-600	0-600mm/0-24"	0.01mm/0.0005"	±0.05mm	778mm
1125-1000	0-1000mm/0-40"	0.01mm/0.0005"	±0.07mm	1205mm

Built-in wireless (receiver code 7315-2/3/6/7/8/9 is needed)

Code	Range *	Resolution	Accuracy	L
1125-600WL	0-600mm/0-24"	0.01mm/0.0005"	±0.05mm	778mm
1125-1000WL	0-1000mm/0-40"	0.01mm/0.0005"	±0.07mm	1205mm

* The range changes according to different points

working with stands






working with measuring jaws




Measuring range

Point (included)	Range (1125-600/600WL)		Range (1125-1000/1000WL)	
	internal	external	internal	external
half disk points	38-638mm/1.5-25.1"	8-608mm/0.3-24"	38-1038mm/1.5-40.9"	8-1008mm/0.3-40"
spherical points	40-640mm/1.6-25.2"	0-580mm/0-24.8"	40-1040mm/1.6-40.9"	0-980mm/0-38.6"


Half disk points (included)

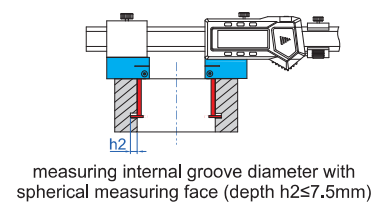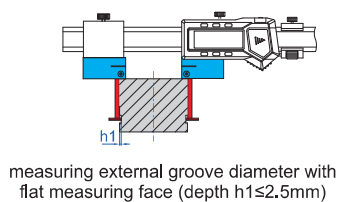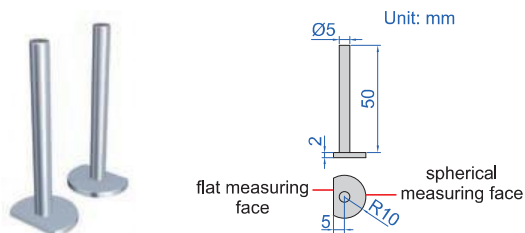


Spherical points (included)

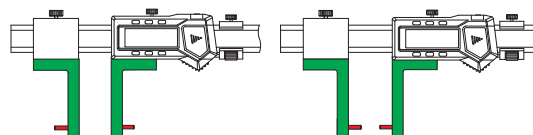



Measuring jaws (included)

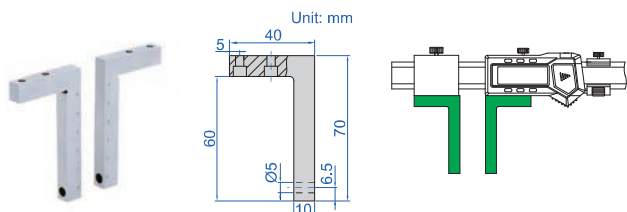

Stands (included)

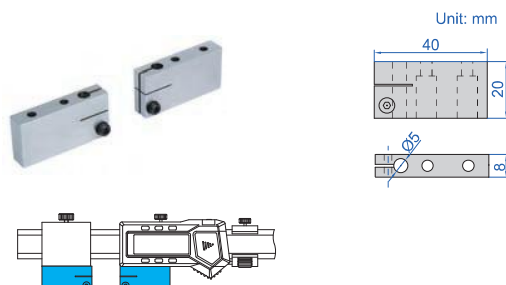

Depth stop (included)

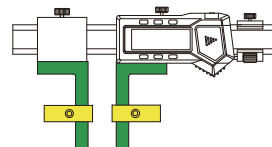
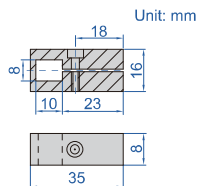


Measuring range

Point (optional)	Code	Range (1125-600/600WL)	Range (1125-1000/1000WL)	Application
conical points	1125-T101	20-620mm/0.8-24.4"	20-1020mm/0.8-40.2"	measuring center distance
round shoulder points	1125-T102	23-623mm/0.9-24.5"	23-1023mm/0.9-40.3"	measure inside diameter of shallow hole
flat shoulder points	1125-T103	28-628mm/1.1-24.7"	28-1028mm/1.1-40.5"	measure outside diameter of low boss



Conical points (optional)

Code
1125-T101

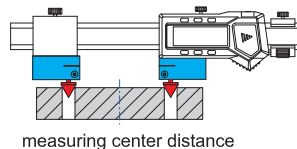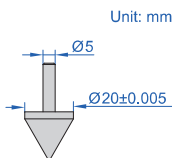



Round shoulder points (optional)

Code
1125-T102

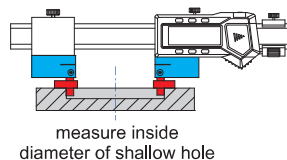



Flat shoulder points (optional)

Code
1125-T103

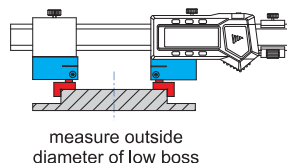

Point sleeve (optional)

Code
1125-T104

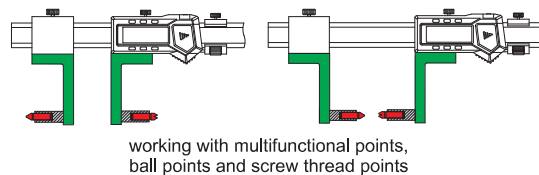

Ball points (optional)

Code	Ball dia. (D)
7391-T2*	SØ1.5mm
7391-T3*	SØ2.0mm
7391-T4*	SØ2.5mm
7391-T5*	SØ3.0mm
7391-T6*	SØ3.5mm
7391-T7*	SØ4.0mm
7391-T8*	SØ4.5mm
7391-T9*	SØ5.0mm
7391-T10*	SØ6.0mm

Measuring range

Range (1125-600/600WL)**		Range (1125-1000/1000WL)**	
internal	external	internal	external
86-677mm/3.4-26.7"	0-534mm/0-21"	86-1077mm/3.4-42.4"	0-934mm/0-36.8"

** Range of 1125-600/600WL and 1125-1000/1000WL after installing the ball points



7391-T5

* It is necessary to use point sleeve (code 1125-T104) for these points


Measuring range

Range (1125-600/600WL) **		Range (1125-1000/1000WL) **	
internal	external	internal	external
75-675mm/3-26.6"	0-555mm/0-21.9"	75-1075mm/3-42.3"	0-955mm/0-37.6"

** Range of **1125-600/600WL** and **1125-1000/1000WL** after installing the multifunctional points

Multifunctional points (optional)

Code	Type
7392-T1 *	flat
7392-T2 *	spherical
7392-T3 *	spline
7392-T4 *	disk
7392-T5 *	blade
7392-T6 *	knife-edge
7392-T7 *	point
7392-T8 *	knife-edge
7392-T9 *	point

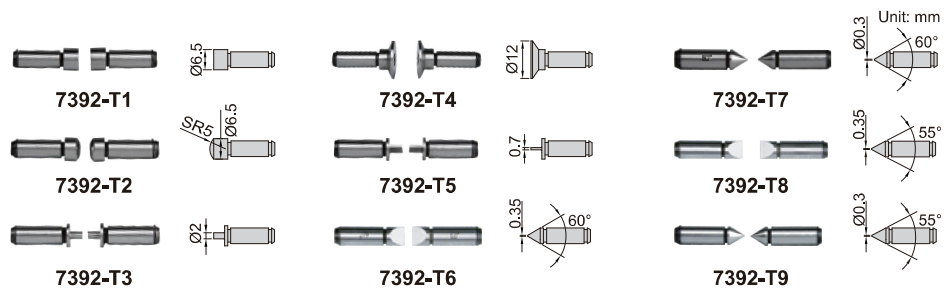

* It is necessary to use point sleeve (code **1125-T104**) for these points

Measuring range

Range (1125-600/600WL) **		Range (1125-1000/1000WL) **	
internal	external	internal	external
75-675mm/3-26.6"	0-555mm/0-21.9"	75-1075mm/3-42.3"	0-955mm/0-37.6"

** Range of **1125-600/600WL** and **1125-1000/1000WL** after installing the screw thread points

Screw thread points (optional)



Internal thread (60° thread angle)

Code	Pitch
7321-T11 *	0.4-0.5mm/64-48TPI
7321-T12 *	0.6-0.9mm/44-28TPI
7321-T13 *	1-1.75mm/24-14TPI
7321-T14 *	2-3mm/13-9TPI
7321-T15 *	3.5-5mm/8-5TPI
7321-T16 *	5.5-7mm/4.5-3.5TPI
7321-T1S *	6 pairs/set, including all above points

External thread (60° thread angle)

Code	Pitch
7381-T11 *	0.4-0.5mm/64-48TPI
7381-T12 *	0.6-0.9mm/44-28TPI
7381-T13 *	1-1.75mm/24-14TPI
7381-T14 *	2-3mm/13-9TPI
7381-T15 *	3.5-5mm/8-5TPI
7381-T16 *	5.5-7mm/4.5-3.5TPI
7381-TS *	6 pairs/set, including all above points

* It is necessary to use point sleeve (code **1125-T104**) for these points